

Jolly		ETA	Vropap / CaC	K+M	Menalux	Swirl Melita
1SBAG (MAX)	Electrolux SBAG	—	CBAG	EP-BAG, E10.1, E13	1800	PH86, E82
2SBAG MAX	Electrolux UltraOne	—	CBAG	EP-BAG	1800	PH86
A2	AEG (Gr. 22, 23, 24, 25, 26)	—	A024, A026	A22, A23	1001	A08, A09
A3 (MAX)	AEG (Gr. 28)	—	A005, A028, P033	A24	1000	A07
A4	AEG (Gr. 5)	—	—	A25	—	A06
A5	AEG (Gr. 16, 20, 27)	—	—	A21	1070P	A17
AQ1 (MAX)	Aquavac	—	A010	A10	4686P, 5885P	Vac120
B10 MAX	Nilfisk GWD 320C	—	—	—	—	—
CP2	Concept Excelent	—	C014	C16.1	—	—
CP3	Concept Clipper	—	C011	C11.2	—	Y98
D2 (MAX)	Daewoo RC105, ETA x452 Viva, x460 O3	27, 35	1458, C003, C006, C013, D002, K004, L003, S001, S010, S011	A04, C12.2, D02, D04, E38.1	1940, 4000	Y05, Y61, Y64, Y93, Y95, Y101, Y201
D3 (MAX)	Daewoo RC 220, 300...	—	D003, D004	D03	4200	Y100
DL1 MAX	De Longhi Jazz	—	D021	D21, A06, B11	4301P	—
E1 (MAX)	Electrolux Clario	—	E010	E13	—	E82, PH86
E2 (MAX)	Electrolux Mondo	—	E011	E11.1	1200	E83, E84
E3	Electrolux Flexio	—	E015	E15.1	1286P, 1285P	E46, P46
E4	Electrolux Praxio	—	E017	E17	1287P	E87
E6	Electrolux Xio	—	E014, P031, P032	E14.1, P31, P32.2, P35	1002	A06
E7	Electrolux Royal Lux	—	E030A	E18	1221P	—
E8	Electrolux Z 716	—	E012	E12	1770P	R23
EC1	ECG, Beco	—	B020	B31	—	Y1240
EIO3	EIO, Morphy Richards 6	—	E003	E03	6000	EIO86
EIO4	EIO, Morphy Richards 8	—	E002	E02	6001P	EIO89
EIO5 (MAX)	EIO, Morphy Richards 9	—	E001	E01	5806, 6002	EIO80
ETA2 (MAX)	ETA x419, Domino, Zoom, Bosco	12	0419, A001, C004, C010, C017, E020, E023, H006, M010, P021, P034	C04, C10.2, C13.2, C15, E27, E42, H06.2, M011, M15, M16, M17, M19, O03, O04, O05, O21.1, P34.2, R07	1750	Y98, X134, Y298
ETA3	ETA x414 Draco, x415 Arcus	17, 18	0414	E26	6101P	X18, X135
ETA4	ETA 0405	6	0405	E25	1970P	X132
ETA5	ETA 0402	2	0402	E32	1802P	—
ETA6	ETA 1400, 7400 starý typ	1	1400	E23	5600P	—
ETA7	ETA x426, x427, x428, 0409 Swing, 2409 Piccolo, x429 Airo	15, 52, 53, 54	0409, 0426, 0427, 0429	E21	2470P	PH 83, X19, X133
ETA8 (MAX)	x406, x407, x408 Quinto, Virtuoso, Maestro, x410 Astro, 411, Apollo, Noblese, 0412 Aquil	13, 16, 19, 33	0408, 0410, 0412	E22.4	6100	X28, X128
ETA9	ETA 7400 nový typ	8	7400 NT	—	2900	—
ETA10 (MAX)	ETA x404 Neptun, Atlantic, x411 Sirius, x441, x405	9, 14	1404, C020, C021,	E24	—	R23, UNI20
ETA11	ETA x400	11	0400	E31	—	—
ETA12	ETA x403	3	0403	E33	3500P	—
ETA13	ETA 0425	51	0425	—	—	—
ETA14	ETA x440	7	0440	E34	1830P	—
ETA15	ETA x430 Sting	55	0430	E35	2970P	X138
ETA16	ETA x416 Windy, x417 Tiro	20, 21	0417, 1416	E28	6102P	X17, X136
ETA17 (MAX)	ETA x450 Proximo, Trino, 1451 Galaxy	22, 23, 25, 32	0450, 0454, 7454	E29.3, E30.2	6103P	X16, X137
ETA18	ETA x418 Junior, x455 Jolly	24, 26	0418, 1455, E021	C17.2, E36.2	3502P	Y50, Y60, Y201
ETA19 (MAX)	ETA Aston 1465	29	1465	B05, E39.1	—	S70
ETA20	ETA Vega 1678	28	1678	—	—	—
H23	Hoover Acenta	—	H008	—	3072P	H39
H24	Hoover Pure Power	—	H020	H08.1	3050P	H37
H25	Hoover Arianne, Telios	—	H003	H02, H03, H07	3001P	H41
H26 (MAX)	Hoover Freespace, Sprint	—	H009, U002	H09	1803P	Y204, X351
H27	Hoovers Athyss, Junior	—	—	—	3073	H43

Jolly		ETA	Vropap / CaC	K+M	Menalux	Swirl Melita
HU2	Hyundai VC 508, Luxtronic V 507	—	H040, R192	H32.2	—	—
HU3 MAX	Hyundai VC 5750	—	H041	—	—	—
HU4 MAX	Hyundai VCP 200	—	—	R03	—	—
HU5 MAX	Hyundai VC 401	—	—	—	—	—
KAR2	Kärcher	—	K002	K02	4885P	K223
KAR3	Kärcher	—	K003	K03	3585P	K224
LG1	Gold Star	—	C005, L002, S002	C05.2, L02, S02.1	4900	Y230, Y30
LG2	Gold Star	—	L001	L01, L07	1840, 5100	Y93, Y101, Y201
LIV1	Liv Modulo, Optimo	—	L021	L21.2, L22.2	6601P	X351
ML1	Miele Meteor, Profi	—	Mi002	M70	3101	M40
ML2 (MAX)	Miele Titanium, Gold	—	Mi001	M71	3100	M50
MX10	Moulinex Atmosphere	—	M001	M010	2110P	MX97
MX11	Moulinex Compact	—	M005	M05	2100	MX87
MX12 (MAX)	Moulinex SuperTrio	—	M003	M03	2185P	MX88
MX13	Moulinex Vectral	—	M009	M09.1	2105P	MX91
MX14	Moulinex Q89	—	K001, M008	M08	1770P	MX89, K222
MX15	Moulinex Powerclean	—	M002, M007	M02	2101	MX93
MX17	Moulinex Powerpack	—	M004	M04	2106P	MX94
MX19	Moulinex Powerstar	—	M006	M06.1	—	MX96
PC1 (MAX)	Panasonic C 2E	—	P001	P01	2702	PC87, PC89, PC90
PC2	Panasonic C 20E	—	P003	P03	—	PC90
PH11 (MAX)	Philips Triathlon	—	P010	P10	3385P	PH85
PH12	Philips Oslo	—	C001, P011	C01, P11	3200	PH84
PH15	Philips Sydney	—	P012	P12	—	PH86, E82
PRO1	Profi1	—	T023	T23	—	Z115
R11	Rowenta	—	R005	R05.1	2500	R22, Y103
R12	Rowenta Dymbo	—	R001	R01.1	2300	R27
R13	Rowenta Ambia	—	R006	R06.1	2302P	R32
R14 (MAX)	Rowenta RU 10	—	N002, R003	B03, E60, E61, M14, O01, O02, R03	1769P, 2585P	R23, R24, X130
R15 MAX	Rowenta Silence Force	—	R010	R010	—	R36
R18	Rowenta Baloon	—	R002	R02.1	2103	R29
S16 (MAX)	Siemens / Bosh	—	B001, B002	B01, B02, B04	2000	S62, S67, S68
SC1 (MAX)	Sencor, ETA x466 Onyx	30, 31, 37	C012, C015, R165, R166, R190, S003, S020, ST76, Z010	C14.2, C18.2, C19.1, D10.1, D12.2, E040.1, H20.2, H21.2, H23.2, H31.1	1840	Y50
SC28	Scarlett SC 285	—	—	—	—	—
SC3 MAX	Sencor SVC 3001, Eta Profi	—	0467F	—	—	—
SG1	Samsung	—	A002, B011, D001	A02, A33, D01.2	—	Y64
SG2 MAX	Samsung	—	S011	S11	—	Y201
ST21	Tesla Team	—	—	E27	—	X134, Y98
ST23 (MAX)	Tesla Team	36	C002	A03, C02, Z19	4600	YC27, Y104
TC1	Tesco VC 206	—	—	—	8043P	—
UNI1 MAX	Univerzální sáček	—	—	X01, X02	—	—
V1	Vorwerk Kobold 130, 131	—	V005	V05	6971P	V64
V2	Vorwerk Kobold 118 - 122	—	V003	V03	6970P	V62
V3 MAX	Vorwerk Kobold 135, 136	—	V007	V06	—	V65
V4 MAX	Vorwerk Kobold 140	—	V004T	—	—	—
VAX MAX	Vax Clasic, Powa, Rapide	—	W001	W01	6885	AT201
Z1 (MAX)	Zelmer Meteor	—	Z006	Z06	5802	Z110
Z2 (MAX)	Zelmer Cobra	—	Z008	Z07, Z07.1, Z08, Z013	5803P	Z111
Z3 (MAX)	Zelmer Vodnik	—	Z009	Z09	7001P	Z112
Z4	Zelmer Flip	—	Z011	Z10, Z11, Z18.2	5803P	Z111
Z5 (MAX)	Zelmer Twister Twist	—	Z015	Z15	7002P	Z113
Z6	Zelmer Oceanic	—	Z004	Z03, Z04.1	7000P	Z109
Z7 (MAX)	Zelmer Maxim	—	Z017	Z17.2	7003	Z114